
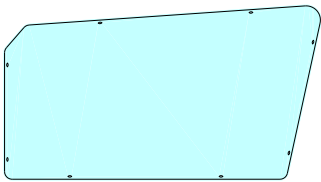



# B813CLAT

MOTTEZ

Bardage latéral pour abri B813C

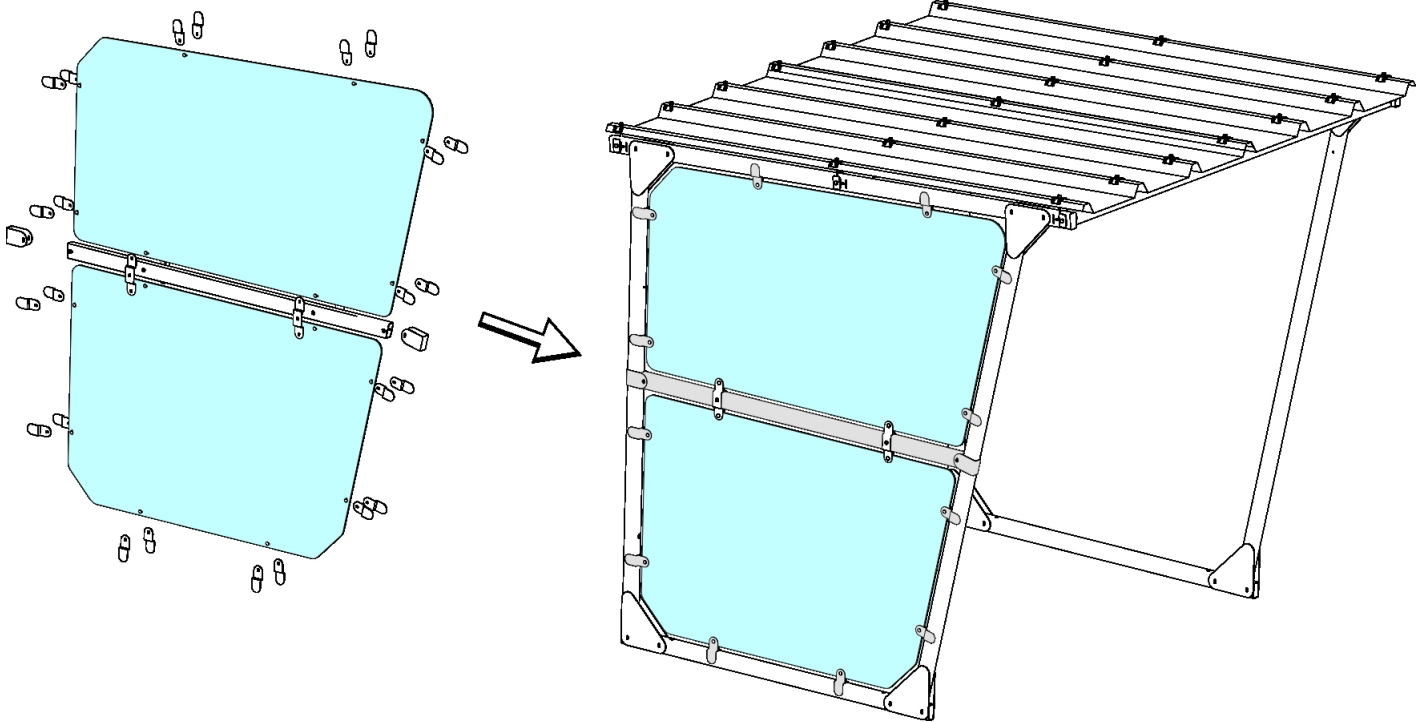


**A x 1**

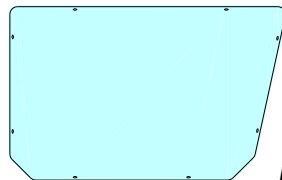


**B x 1**




**C x 1**




**D x 24**




**E x 4**

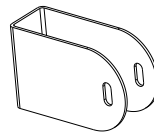


**F x 2**



**G x 4**



**H x 16**




$\phi$  6  
**I x 20**




M6  
**J x 20**

Outils nécessaires (non fournis) au montage  
Tools required (not supplied) for assembly  
Erforderliches Montagewerkzeug (nicht mitgeliefert)  
Voor de montage benodigd gereedschap (niet meegeleverd)



10

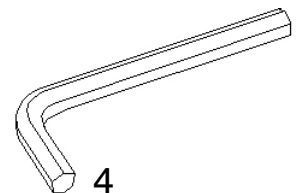

4

