
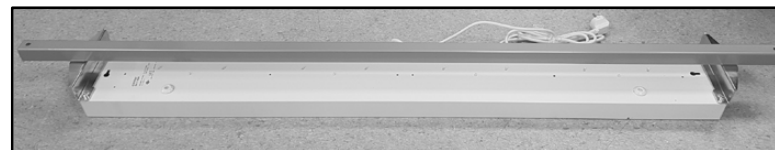
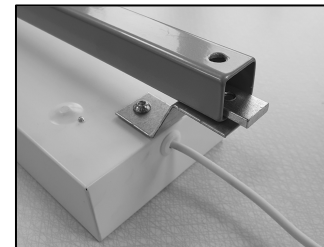
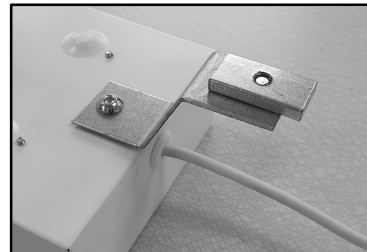
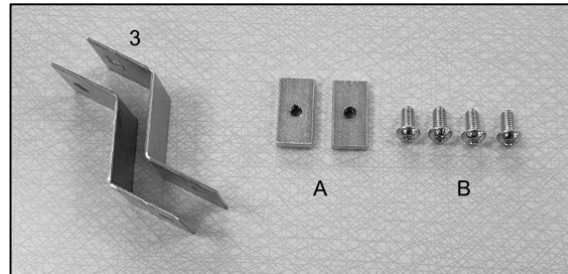


Monteringsanvisning LED Armatur på längshängd C-profil

1. 1 st Armatur
2. 1 st Längshängd C- profil (separat anvisning)
3. 2 st Z beslag
- A. 2 st plattjärn med M8 gänga
- B. 4 st Bult Insex M8x16 mm

Montering:

1. Montera Z beslagen (3) på armaturens rygg med bult M8x16 mm (A).
2. Fäst plattjärnen (B) i beslagen med bult M8x16 mm (C). Obs! Dra ej åt bulten.
3. För in den längshängda c-profilen (1) över de två plattjärnen. Centrera armaturen och dra åt bulten.
4. C-profilen monteras sedan på konsoler enligt separat anvisning (se Längshängd C-profil).

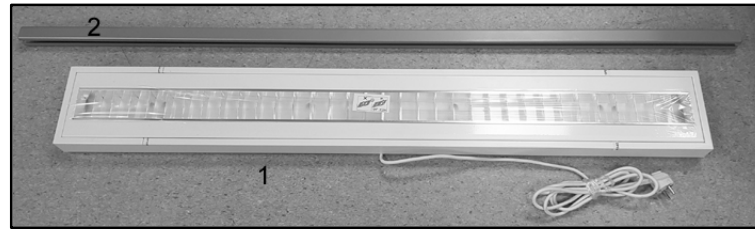

Assembly instruction LED Luminaire

1. 1 pcs luminaire
2. 1 pcs C-profile (see separate instruction)
3. 2 pcs Z brackets
- A. 2 pcs Flat iron
- B. 4 pcs Bolt M8x16 mm

Mounting:

1. Mount 2 pcs Z brackets (3) at the luminaires back. Use bolt M8x16 mm (A).
2. Attached flat irons on the Z-brackets. Use bolt M8x16 mm (C). Obs! Do not tighten the bolt.
3. Insert the C-profile on the flats irons. Center the c-profile over the luminaire and tighten the bolts.
4. Mont c-profile at consoles according to separate instruction (see C-profile on consoles)